



ASSEMBLY INSTRUCTION

BRYAN BAR CHAIR

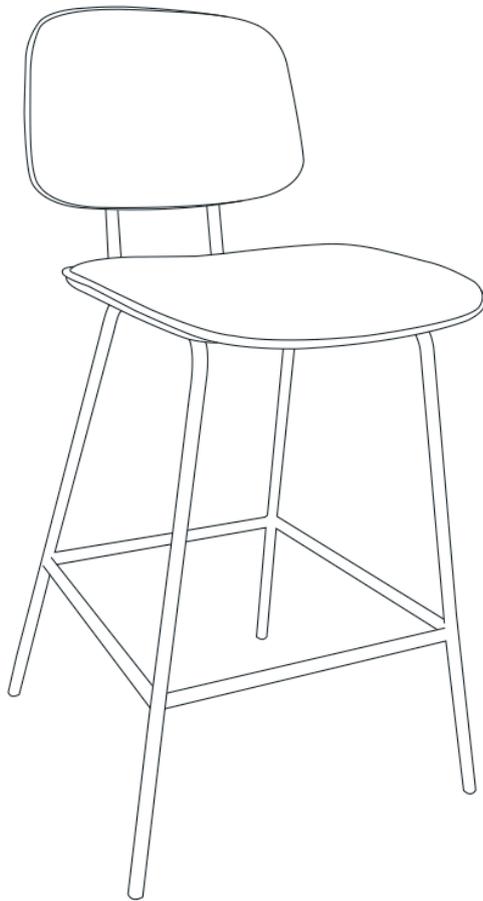


ROWICO

HOME

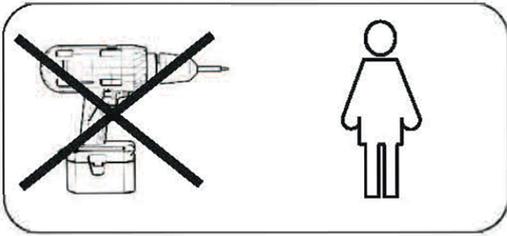


Ax4  M6×20MM	Dx1 
Bx4  M6×25MM	Ex4 
Cx1 	Fx1 

1

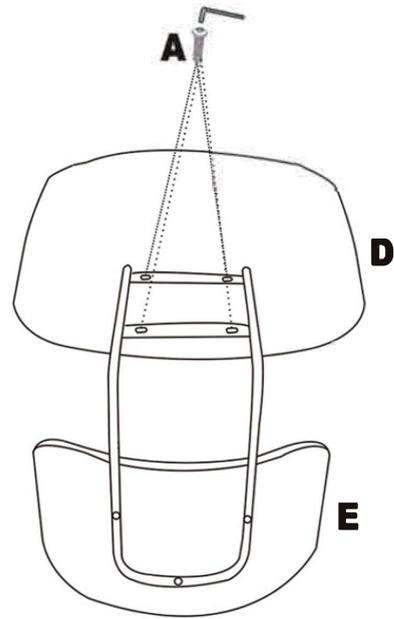

2

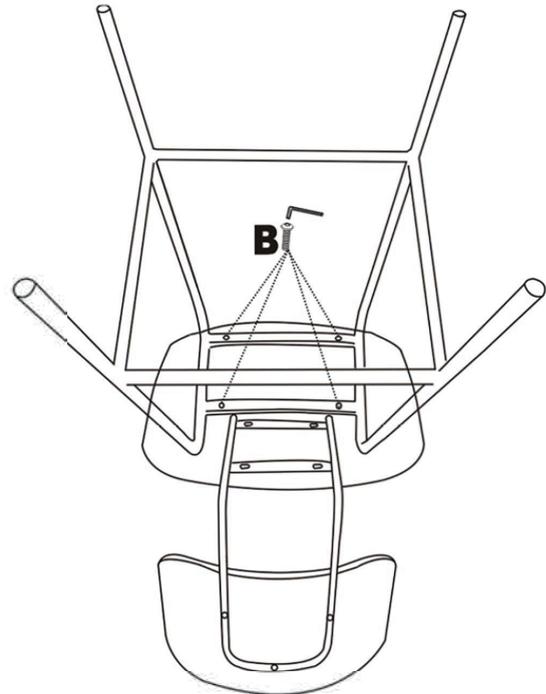

3

