

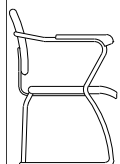



Thank you very much for your support and cooperation! please check if there are missing components in the carton before assembling the goods, thanks!

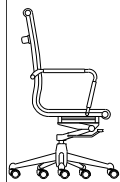


STEP 1

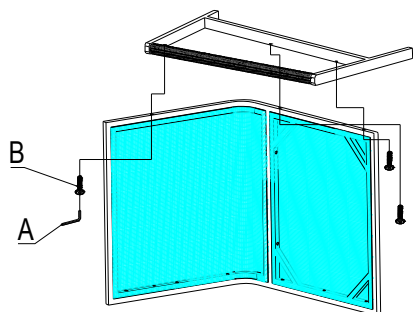


STEP 2

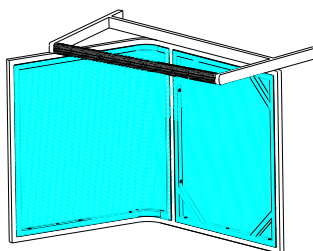

STEP 3

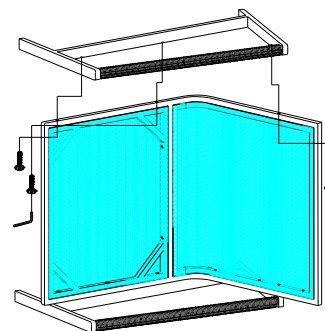

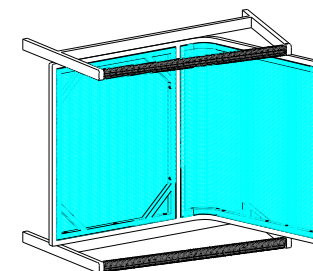

STEP 4



- Note: 1、Placing the package carton or wrapping material on the floor as a protection during the installation process. Side laying the frame and install the screws as picture 1. ;  
 2、Tighten the screws as pictures 2. ;  
 3、The installation for the other side is the same as in step 1, see picture 3. ;  
 4、Tighten the screws as picture 4.

TS-31-1

NO.	A	B
TYPE	 5mm	 M8x50
QTY.	1 PC	6 PCS